


|               |            |            |
|---------------|------------|------------|
| <b>Runway</b> | <b>QNH</b> | <b>QFE</b> |
|               |            |            |

|                                   |                |
|-----------------------------------|----------------|
| <b>Microlight Frequency</b>       | <b>129.825</b> |
| <b>Scottish Information</b>       | <b>119.875</b> |
| <b>Inverness ATIS</b>             | <b>109.200</b> |
| <b>Inverness Tower</b>            | <b>118.405</b> |
| <b>Inverness Radar / Approach</b> | <b>122.605</b> |
| <b>Tain Range</b>                 | <b>122.750</b> |

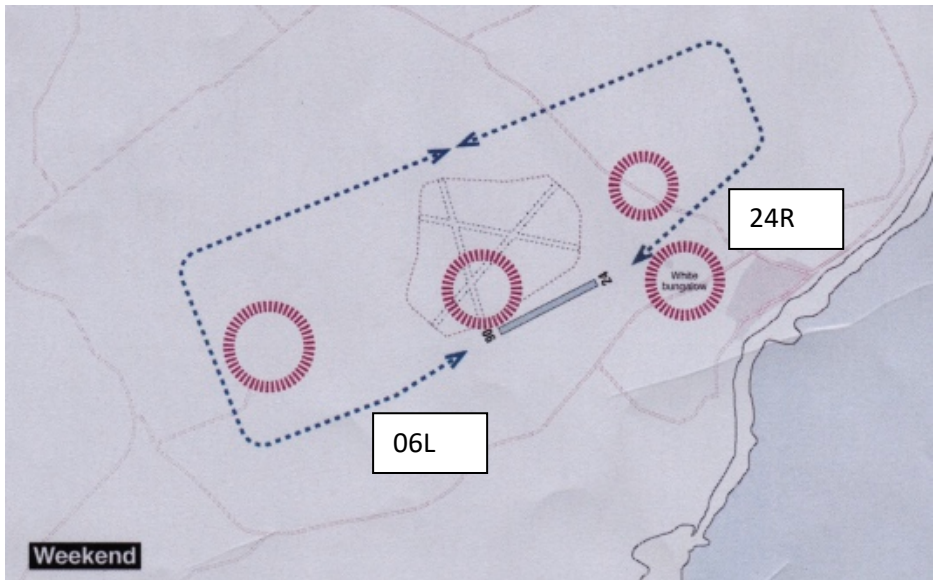

Easter Airfield PPR Tel: 01862 832900 or 07967 715304 | RAF TAIN 01862 894164

WeekDays – Tain Danger Area – PPR Required (Incoming & Outgoing)

Tain Range 122.750 | Enter/Report from Nigg Bay

**Easter Traffic 135.480 | Circuit Height 1,000ft**

**QFE= QNH**

## **Weekday operations at Easter Airfield**

### **Inbound -**

Obtain PPR by calling 07967 715 304.

Telephone Tain Duty Controller on 01862 894164 (direct) or 01862-892185 (switchboard). Request a range briefing to coincide with your ETA.

Route to Easter entry/exit lane at Nigg Bay, hold outside D703.

Establish two-way with Tain Range 122.750. Comply with their instructions.

Depending on wind, position for straight in approach 06 or join downwind LH for 24.

Transmit as having landed when on ground at Easter.

### **Outbound -**

Telephone Tain Duty Controller on 01862 894164 (direct) or 01862-892185 (switchboard). Request a range briefing to coincide with your ETD.

After power checks complete, call Tain Range on 122.750 for a departure clearance. Do not commence take off roll until 2 way communications established.

Depart via Easter entry/exit lane at Nigg Bay in accordance with noise abatement chart above.

Note : Circuits are not permitted at Easter Airfield during Tain Range operating hours.

## **Weekend operations at Easter Airfield**

### **Inbound -**

1. Obtain PPR by calling 07967 715 304.
2. Route to Easter entry/exit lane at Nigg Bay.
3. Transmit blind calls on Safetycom 135.480. Join at your discretion, 06 LH or downwind RH 24.

### **Outbound -**

1. Transmit blind on Safetycom 135.480.
2. Departure at your discretion, 06 LH circuits, 24 RH circuits.
3. Depart via Easter entry/exit lane at Nigg Bay in accordance with noise abatement chart above.